

Porch Swing

Porch Swing Assembly Video:
<https://youtu.be/7yV780BoFOs>

Tools needed:

Hammer for light tapping
7/16" Socket or Wrench

Parts List:

A. - Swing Seat - (1 pc.)

*Please note: If you have a rollback swing the seat part (A) is the place that has a curve in it.
The slats are also even with the frame. (See picture above)*

B. - Swing Back - (1 pc.)

C. - Right Arm (1 pc.)


D. - Left Arm (1 pc.)

L. - 27" Swing Chains (2 pcs.)

M. - 68" Swing Chains (2 pcs.)

N. - 1/4" x 3 1/4" Bolts (10 pcs.)

O. - Flange Nuts (14 pcs.)

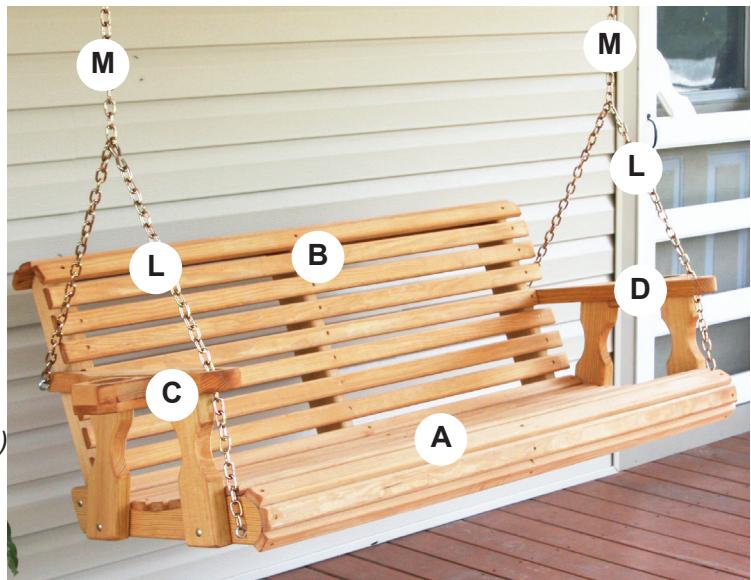

Instructions:

Step 1. Lay swing seat (A) on flat surface. Take the Swing Back (B) and put between swing seat (A). Line up the holes and put two 1/4" x 3 1/4" bolts (n) on each side and in the center piece of seat and back support. Hand tighten a flange nut (o) on each end of 1/4" x 3 1/4" bolt (N).

Step 2. If you have ordered cupholder with your swing you can attach them to the bottom of arms now or wait until you have arms attached. Fasten with 1 1/2" screws. Screws are located inside the cupholders. Note: Cupholders are optional, if you did not order them with your swing they will not be inside the box.

Step 3. Next get the Right Arm (C) and two 1/4" x 3 1/4" Bolts (N) and put them in the legs of Arm (C), lining them up with holes in Swing Seat (A). You may have to twist arm a little. Note: Do not put a bolt in the back of armrest where it connects to the backrest. This is where the 68" chain attaches. Hand tighten a flange nut (O) on each end. Fasten the Left Arm (D) in the same manner.

Step 4. Take the 68" Swing Chain (M) and get the end with the eye bolt on the end. Push eye bolt through the hole in Arm (C) and through the hole in Swing Back (B) - you may have to push Arm, (C) a little to line up holes.

Step 5. Take the 27" Swing Chain (L) and get the end with the eye bolt on the end. Note: Make sure your 27" chains are not hooked together. Sometimes during shipping they get hooked together, if this happens just disconnect them by the hooks. Take the eyebolt through the 1" hole in the front of Arm (C) and push it through the hole on side of Swing Seat (A). Take the other end of the short chain and hook it on the long chain. Standard is around 24 links counting up from the long eyebolt. Hand tighten a Flange Nut (O) on each end. Fasten Swing Chain (L & M) in the same manner on Arm (D). Tighten all Flange Nuts (O) with 7/16" socket or wrench. Make sure bolt head is flush with the wood.

Hang and enjoy!

Missing or damaged parts? For customer service call Centerville Woodworks message center (814) 349-4499. Our promise - your call will be returned.